


HOW TO USE THE CORDING FOOT (Type A) (for 2-needle 4-thread serger)

- Use for decorative cording.
- Use for fishline hem.

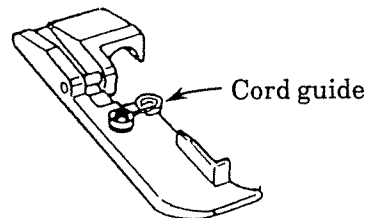

- 1) Remove the foot from the sewing machine.
- 2) Insert some cord into the guide on the cording foot. Then, attach the foot to the machine and pull a little cord behind the foot.
- 3) You must choose either the blanket stitch or the rolled hem stitch when sewing cord with the cording foot. Use 3 standard-width threads.
- 4) Insert the cloth just in front of the upper knife. Start sewing, pulling the cord lightly and drawing it right of the needle. (Fig. 1)

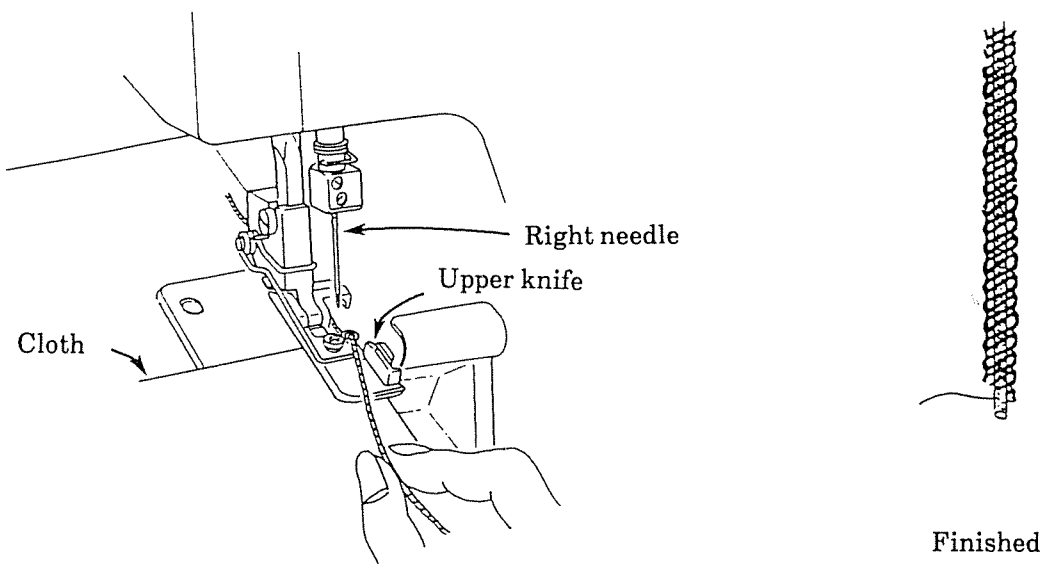


Fig. 1